

WARNING

- This product must be disconnected from the circuit if subjected to any high voltage or insulation resistance testing. Irreparable damage will occur if this instruction is not followed
- Recommended routine test procedure in accordance with BS5266
- Daily check – check that the status GREEN LED indicator is illuminated
- Monthly functional test – simulate a mains supply failure for approx. 30 secs by operation of key switch or switching off a circuit breaker. Ensure normal supply is restored after test and the indicator status LED is illuminated
- Twice yearly conduct a one hour duration test - simulate a mains supply failure for one hour continuous test by operation of key switch or switching off circuit breaker. Ensure normal supply is restored after test and the indicator status LED is illuminated
- Annual full three hour duration test - conduct a three hour continuous duration test. Simulate a mains supply failure for three hour continuous test by operation of key switch or switching off circuit breaker. Ensure normal supply is restored after test and the indicator status LED is illuminated
- If the luminaire fails any of the above tests, please contact a qualified electrician.

GENERAL

The LEDs fitted in this product are non-replaceable. The unit should be recycled in the correct manner when it reaches the end of its life. Check local authorities for where facilities exist. Clean with a soft dry cloth only, do not use aggressive cleaning products or solvents which may damage the fitting.

WARRANTY

Please contact your supplier.

www.espuk.com

Unit 7 | Target Park | Shawbank Road | Lakeside | Redditch | B98 8YN | United Kingdom
T: +44 (0)1527 51 51 50 F: +44 (0)1527 51 51 43
E: sales@espuk.com



INSTALLATION & MAINTENANCE MANUAL SUSPENDED LED EXIT SIGN



GENERAL INSTRUCTIONS:

These instructions should be read carefully and retained after installation by the end user for future reference and maintenance.

These instructions should be used to aid installation of the following product:
EMLSUS

SAFETY:

- Installation of this luminaire should only be carried out by a qualified electrician or competent person to the current IEE Wiring Regulations (BS7671) & current Building Regulations
- Please isolate mains prior to installation/maintenance
- Check the total load on the circuit, including when this luminaire is fitted, does not exceed the rating of the circuit cable, fuse or circuit breaker
- Please note the IP (Ingress of Protection) rating of this luminaire when deciding the location for installation
- This product is Class II double insulated
- This product is non-dimmable

INSTALLATION:

- Provide power to the required point of installation, suitable IP rated junctions boxes should be used where required
- Mark the location of the fixing holes and drill the holes ensuring not to infringe with any joists, gas or water pipes or electrical cables
- Feed suspension cable through clamp
- Remove 2 screws on top of the fitting (see fig 1)

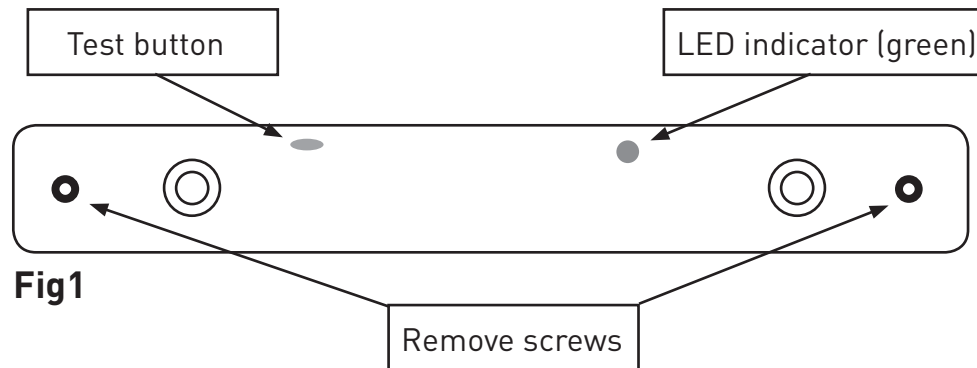


Fig1

- Connect the battery to the inverter via the plug and socket provided
- Connect the Live and Neutral to the push fit terminals on the PCB of the inverter (Fig 2)



Fig 2

- This product can only be used in maintained operation (luminaire constantly on)
- Switch on the power supply and ensure the LED indicator is illuminated green. If it is not illuminated green, there may be a battery fault
- The height of the sign can be adjusted via the compression clamp on the luminaire (see fig 3)



Fig 3

Press this part of the clamp to adjust the length

Can be adjusted to a maximum length of 800mm.