



INSTALLATION

- 1) Ensure mains supply is off
- 2) Remove the lid from the base using the holding slot
- 3) After completing cable entry, mount the base to intended surface
- 4) Select and fit the open lens or corridor lens to the front lid
- 5) Connect the mains supply to the L & N terminal block.
If using Maintained mode, please review the wiring options below
- 6) Connect the battery to the board with the 2-pin connector
- 7) Ensuring the lid orientation matches the base, refit the lid onto the base until it clips into position
- 8) Switch on mains supply, ensure the green LED indication is visible.

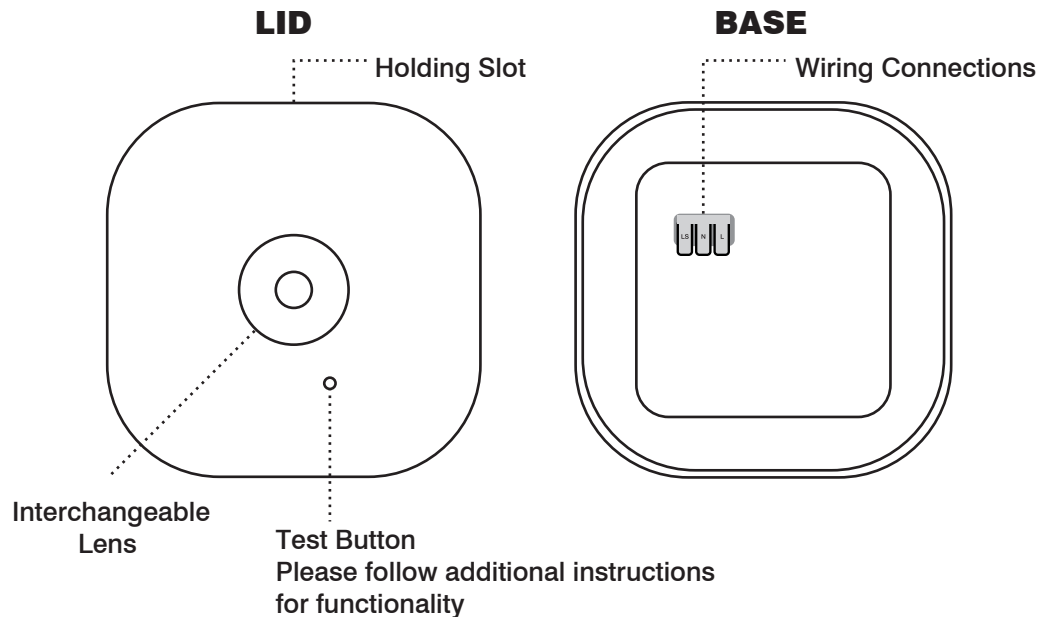

WIRING OPTIONS

1. Non-Maintained Operation
2. Switchable Maintained Operation
3. Maintained Operation (luminaire always on)

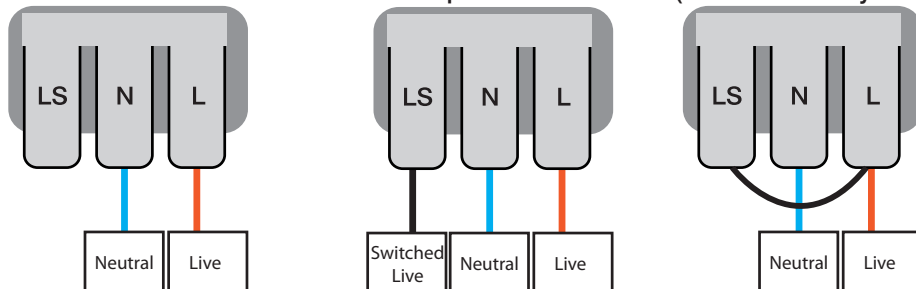

FAULT FINDING AND CORRECTIVE ACTION

MONITORING LED NOT ILLUMINATED

A.C. supply not healthy. Battery not connected. Charger failed.

UNIT NOT MEETING REQUIRED EMERGENCY PERIOD

May need cycling: Discharge then, recharge for full 24 hours. Retest, battery may need replacing if emergency duration is still not met.

LAMP NOT ILLUMINATED

If illumination is hesitant and of a low level, either the battery or (less likely) the printed circuit board needs replacing.

RECOMMENDED ROUTINE TEST PROCEDURE

The following test is designed to ensure the continued protection of your premises and occupants. Because of the possibility of a failure of the normal lighting supply occurring shortly after a period of testing, all tests should whenever possible, be undertaken at times of least risk, e.g during daylight hours.

ONCE A DAY

Visual inspection of battery charge LED.

ONCE A MONTH

Each unit should be energised from its battery for about 30 seconds by simulation of a failure of the normal lighting supply, to ensure the lamp operates in the emergency condition.

TWICE A YEAR

Each unit should be energised from its battery for a continuous period of at least one hour.

ONCE A YEAR

Each unit should be energised from its battery for a continuous period of at least three hours.



Elite Security Products
Unit 7, Target Park,
Shawbank Road, Lakeside,
Redditch B98 8YN
Telephone: 01527 51 51 50
Fax: 01527 51 51 43

Email: info@espuk.com
www.espuk.com
E&OE - Errors and omissions excepted.G18