





## INSTALLATION

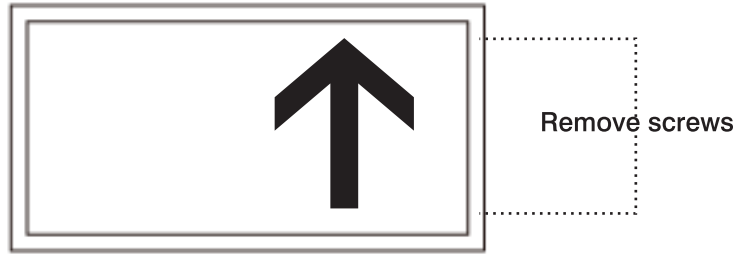

- 1) Ensure mains supply is off
- 2) Remove the legend from the body using the 2 holding screws
- 3) After completing cable entry, mount the body to intended surface
- 4) Connect the mains supply to the L , N & E terminal block.  
If using Maintained mode, please review the wiring options below
- 5) Connect the battery to the board with the 2-pin connector
- 6) Re-fit legend & secure with the 2 holding screws
- 7) Switch on mains supply, ensure the green LED indication is visible.


## TEST BUTTON

Remove the legend from the body using the 2 holding screws

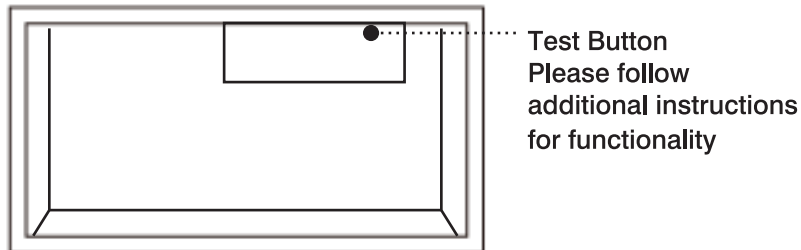


## WIRING OPTIONS


### 1. Non-Maintained Operation

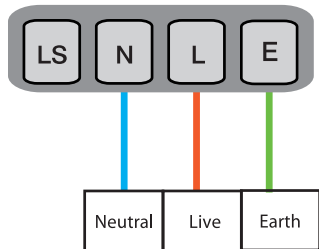

### 2. Switchable Maintained Operation

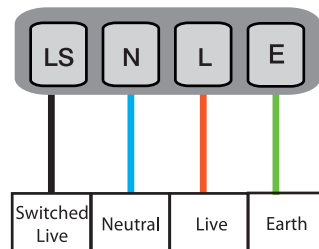

### 3. Maintained Operation (luminaire always on)

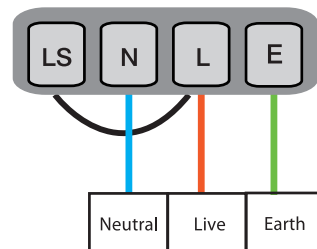

Switch on the power supply and ensure the LED status indicator is illuminated green to ensure the battery and supply are functioning. After 36 hours on continuous charge a mains failure should be simulated to ensure successful operation.

## FAULT FINDING AND CORRECTIVE ACTION

### MONITORING LED NOT ILLUMINATED

A.C. supply not healthy. Battery not connected. Charger failed.

### UNIT NOT MEETING REQUIRED EMERGENCY PERIOD

May need cycling: Discharge then, recharge for full 24 hours. Retest, battery may need replacing if emergency duration is still not met.

### LAMP NOT ILLUMINATED

If illumination is hesitant and of a low level, either the battery or (less likely) the printed circuit board needs replacing.

### RECOMMENDED ROUTINE TEST PROCEDURE

The following test is designed to ensure the continued protection of your premises and occupants. Because of the possibility of a failure of the normal lighting supply occurring shortly after a period of testing, all tests should whenever possible, be undertaken at times of least risk, e.g during daylight hours.

### ONCE A DAY

Visual inspection of battery charge LED.

### ONCE A MONTH

Each unit should be energised from its battery for about 30 seconds by simulation of a failure of the normal lighting supply, to ensure the lamp operates in the emergency condition.

### TWICE A YEAR

Each unit should be energized from its battery for a continuous period of at least one hour.

### ONCE A YEAR

Each unit should be energized from its battery for a continuous period of at least three hours.



Elite Security Products  
Unit 7, Target Park,  
Shawbank Road, Lakeside,  
Redditch B98 8YN  
Telephone: 01527 51 51 50  
Fax: 01527 51 51 43

Email: [info@espuke.com](mailto:info@espuke.com)  
[www.espuke.com](http://www.espuke.com)  
E&OE - Errors and omissions excepted.G18