

A1IPDSM1

Quick Start Guide



Aperta IP PoE Multi Way Outdoor Station IP65 HD
with Proximity Reader



The latest product manuals and software is available online:
https://www.espuk.com/technical_support



1. Installation

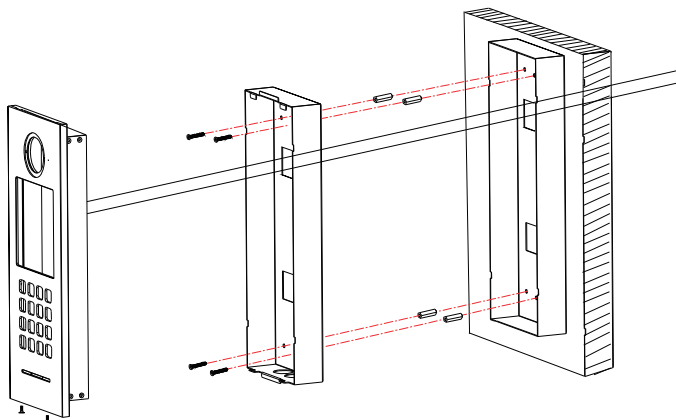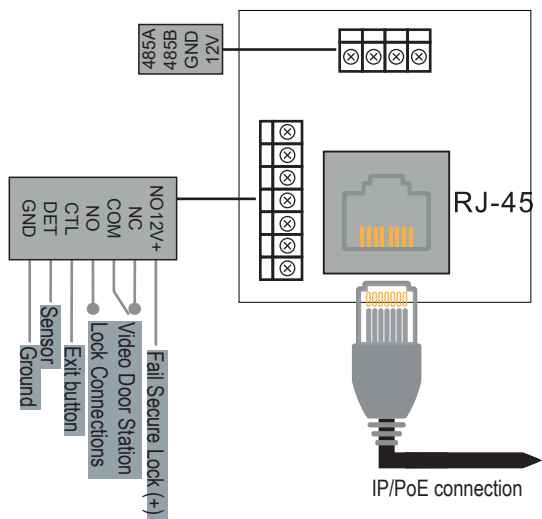

Connect the Door Station to a switch/network or alternatively directly to a Monitor using the RJ45 port.

If the connected network does not support PoE, then DC12V1A needs to be applied to the 12V & GND terminals.

*All system cabling has been tested with Cat5E UTP PVC Cable.

**Maximum distance of 100m to PoE switch is supported.

2. Addressing the Apartment Outdoor Station

1. **Enter administration mode:**
When in standby, press # to enter the password entry screen, then type in the **Administration Passcode**, and then press #.
2. When Address is selected press # to enter. If address is not selected, use the **4** and **6** keys to navigate the menu.
3. Once in the "Address" menu, press "#" to edit the address of the Outdoor Station.
 - A. When editing the address the field will be highlighted, use * to delete a number, once all 4 digits are entered press #.
 - I. If it is the first Outdoor Station set to address to "0101"
 - II. If there are more than 1 Outdoor Station(s) the address can be any value between 0102 ~ 0104
4. Press * to exit the Administration mode.

Note:
Default Admin Passcode is 666666.
A maximum of 4 Apartment Outdoor Stations per buildings are available, contact ESP Technical for further information.

3. Public PIN Code

1. **Enter administration mode:**
When in standby, press # to enter the password entry screen, then type in the **Administration Passcode**, and then press #.
2. **Setting the Public Unlock PIN:**
Once in Administration Mode select "**Unlock PWD**" by using the **4** and **6** keys to navigate the menus, and then press # to enter the menu.
3. You will then need to enter the Administration Passcode, and then the new public unlock passcode twice. And then press # to confirm and exit the menu.
4. Press * to exit the Administration mode.

Note:
Default Admin Passcode is 666666. The public unlock password must not be a identical if reversed.
Public PIN code must be 6 digits

3. Adding User Fob/Cards.

- 1. Enter administration mode:**
When in standby, press # to enter the password entry screen, then type in the **Administration Passcode**, and then press #.
- 2. Managing the Card/Fobs:**
Once in Administration Mode select "**Card Manage**" by using the **4** and **6** keys to navigate the menus, and then press # to enter the menu.
3. You will then need to enter the "Add Card" menu, by pressing **0** and #.
4. You will then need to type in the address of the apartment that the card/fob will be assigned to, and press "#".
5. You need to only enter *4 digits* (Room) address of the monitor the fob is being assigned to. For example "**0001Room.01Ext**" you only need to enter "**0001**".
6. And then present each card/fob(s) in order to add them to that address, when all have been added press "#".
7. Press * to exit the Administration mode.

Note: Default Admin Passcode is 666666. The public unlock password must not be a identical if reversed. Only 13.56 MHz Fob/Cards are supported.

Contact Details



Elite Security Products UK, Unit 7 Target Park, Shawbank Road, Lakeside, Redditch, Worcestershire, B98 8YN
Tel: +44(0) 1527 51 51 50 Fax: +44(0) 1527 15 01 43 Email: info@espu.com
Registered in England, Company Registration Number: 02769392, VAT Registration: GB614686525

For more product information please visit www.espu.com

E&OE - Errors and Omissions Excepted. D23

● ● ● ● ● ScolmoreGROUP

