

FAULT Events Review in the System

FAULT EVENT Indication **FAULT Message**

- GENERAL FIRE
- PRE ALARM
- GENERAL FAULT
- SYSTEM FAULT**
- SOUNDERS SILENCED
- DELAY
- DISABLE
- TEST
- POWER ON

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56
57	58	59	60	61	62	63	64
65	66	67	68	69	70	71	72
73	74	75	76	77	78	79	80
81	82	83	84	85	86	87	88
89	90	91	92	93	94	95	96

NOTE: The WARNING Messages for events are with lower priority and they are not displayed automatically from the panel!

- GENERAL FIRE
- PRE ALARM
- GENERAL FAULT
- SYSTEM FAULT
- SOUNDERS SILENCED
- DELAY
- DISABLE
- TEST
- POWER ON

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56
57	58	59	60	61	62	63	64
65	66	67	68	69	70	71	72
73	74	75	76	77	78	79	80
81	82	83	84	85	86	87	88
89	90	91	92	93	94	95	96

1 FAULT EVENT
Turn off the buzzer:

In case of Operation in Network, turn off the buzzer as choose:

Select Panel Number 1-64, press an active button for a single panel in the Network,

or

Select ALL available panels in the Network,

or

Select only THIS concrete panel.

Check the type of FAULT!

1 WARNING EVENT
Turn off the buzzer:

In case of Operation in Network, choose the panels, where to perform Turn off Buzzer.

Check the type of WARNING!

2 Call the MAINTENANCE SERVICE and report for the type of FAULT or WARNING event:

Tel:.....

Mobile:.....

Responsible person:.....

User Quick Guidelines for MAGPRO9601 Addressable Fire Alarm Panel


FIRE Event in the System

FIRE ALARM Indication

Activated Sounders

- GENERAL FIRE
- PRE ALARM
- GENERAL FAULT
- SYSTEM FAULT
- SOUNDERS SILENCED
- DELAY
- DISABLE
- TEST
- POWER ON



FIRE ALARM Message

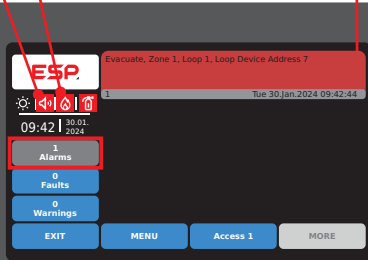


FIRE alarm in the zones

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56
57	58	59	60	61	62	63	64
65	66	67	68	69	70	71	72
73	74	75	76	77	78	79	80
81	82	83	84	85	86	87	88
89	90	91	92	93	94	95	96

1 FIRE ALARM EVENT, time delay set for Sounder, Fire and Fire Protection outputs Turn off the buzzer:

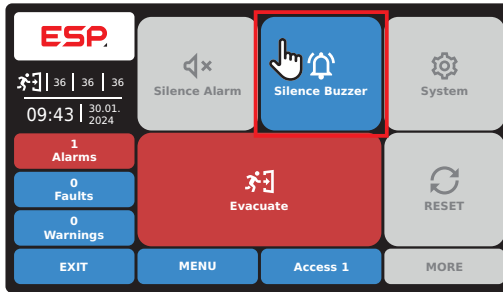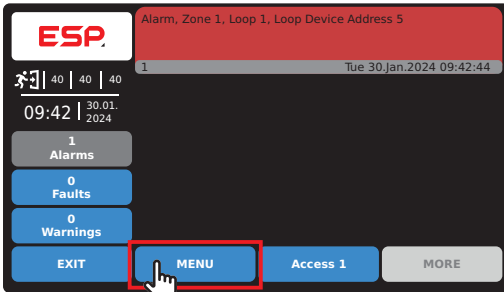

In case of Operation in Network, turn off the buzzer as choose:

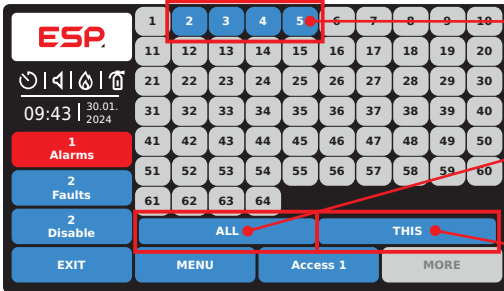


Select Panel Number 1-64, press an active button for a single panel in the Network,

or

Select ALL available panels in the Network,


or

Select only THIS concrete panel.

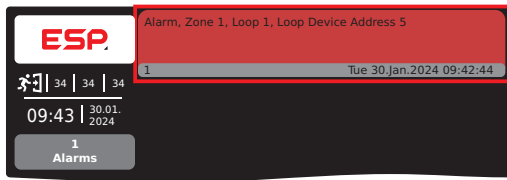


Go to the zone with fire alarm event and check for a real presence of FIRE, then follow **Step 2 - Start Evacuation,** and/or **Step 3 - Stop Sounders,** according the situation.

2 REAL FIRE ALARM, time delay set for Sounder, Fire and Fire Protection outputs Start Evacuation:

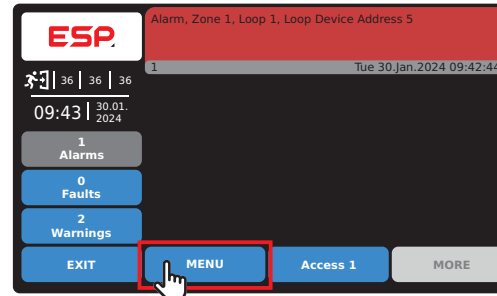

In case of Operation in Network, start Evacuation as choose:

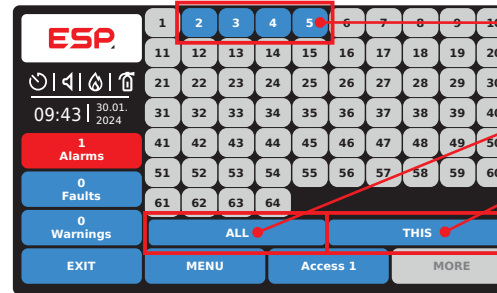


Select Panel Number 1-64, press an active button for a single panel in the Network,

or



Select ALL available panels in the Network,

or

 Select only THIS concrete panel.



3 Turn off sounders and Reset:

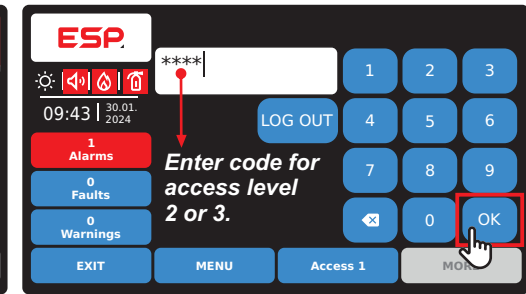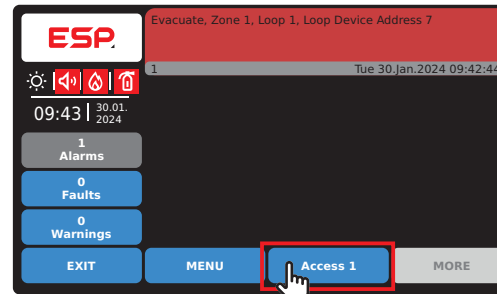

Enter code for access level 2 or 3.



In case of Operation in Network, choose the panels, where to perform Turn off Sounders.

The panel is reset to Normal operation mode. Press **Access 2** , then **LOG OUT** .


Zone TEST

NOTE: The Messages for running tests in the system are with the lowest priority and they are not displayed automatically from the panel!

Active Test Indication

- GENERAL FIRE
- PRE ALARM
- GENERAL FAULT
- SYSTEM FAULT
- SOUNDERS SILENCED
- DELAY
- DISABLE
- TEST
- POWER ON

Messages for Zones in Test

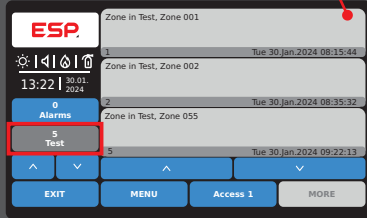

Number of Zone in Test

1	2	4	5	6	7	8	
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56
57	58	59	60	61	62	63	64
65	66	67	68	69	70	71	72
73	74	75	76	77	78	79	80
81	82	83	84	85	86	87	88
89	90	91	92	93	94	95	96


Button sequence for ZONE testing:

1

Code for ACCESS LEVEL 2 or 3

2

3 Select the zones for testing. To test all zone numbers, press the "Select all" button. Press Up/Down buttons to review the rest zone numbers. Press "Test" to start.

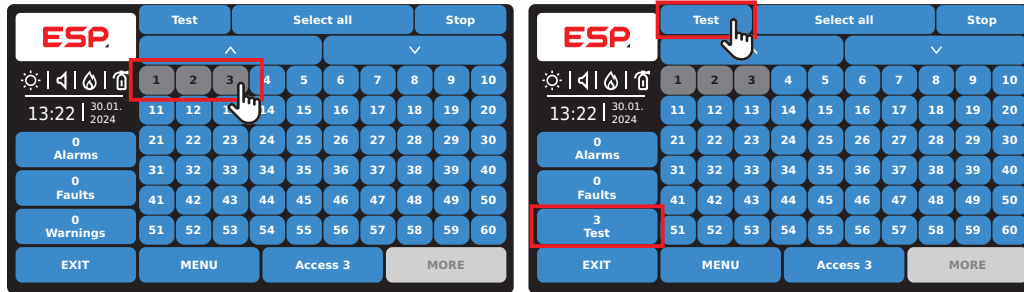

4 Go to the zones in test and activate the installed detectors to check the system for proper work and efficiency. 5

Button sequence to exit the ZONE testing:

5

NOTE: The DISABLE Messages for events are with high priority but they are not displayed automatically from the panel!

Indication for DISABLEMENT

Button sequence for DISABLE introducing:

1

Code for ACCESS LEVEL 2 or 3

Button sequence for ZONE DISABLE:

2

Select the zone for disabling.

3 The zone is disabled.

Button sequence for OUTPUTS DISABLE:

2

Choose an output to disable: Sounder; Fire Brigade; Fire Protection; Fault Output; Relay 1-4.

3 The output is disabled.

You can disable several outputs at the same time.

Button sequence for LOOP DEVICES DISABLE:

2

Select the address of the device.

3 The loop device is disabled

Enabling of ZONES, OUTPUTS and LOOP DEVICES:

1 2 3 The Zone/Output/ Loop Device is enabled.